flown™



GOBRUSH PRO

QUICK START GUIDE

Product Overview



Congratulations on your

flown™ GOBRUSH PRO

This manual will walk you through everything, step by step. How to charge your GoBrush Pro, how it works, and how to get perfect salon-quality styles in just a few minutes at home. No experience needed, we've kept every step as simple as the tool itself.

flown™

Everything You Need Is Already Here.



GoBrush PRO

Your Ultimate On-the-Go Hair Solution!
Freedom to Style: Anytime, Anywhere!



Essential Hair Styling Tools

Precision pintail comb and strong grip clips for effortless sectioning and styling.



USB-C Cable


All you need is your regular charger block. Use any USB-C adapter, laptop port, or power bank.

Charging your GoBrush PRO

Before your first use, charge your GoBrush PRO fully.

- Plug the USB-C cable into your GoBrush Pro and into any USB power source.
- The LED display will show a charging icon while it charges.
- Once fully charged, the icon will disappear.

A full charge takes about 2 hours and gives you approximately 30 minutes of styling time.

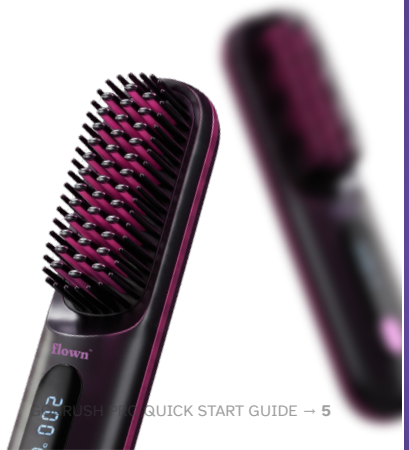

HOW TO USE YOUR GOBRUSH PRO

Start with dry, detangled hair




Make sure your hair is completely dry. Brush through with a regular brush or comb to remove all tangles and knots. The GoBrush PRO works on dry hair only.

Pro Tip:

If you have just washed your hair, let it air dry or blow-dry it first. The GoBrush PRO is a finishing and styling tool, not a blow-dryer replacement.

Choose your heat setting

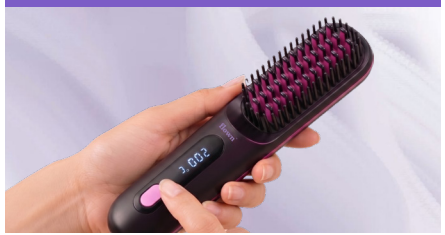

Power On: Press and hold the power button for a few seconds to turn the device on or off.

Select Temperature: Click the power / temperature button to cycle through the three heat levels:

Temperature Guide

160°C/320°F - For Soft, Fine, or Thin Hair.
180°C/356°F - For Normal or Wavy Hair.
200°C/392°F - For Thick, Strong, Coarse, or Coily Hair.

Pro Tip:

The brush heats up in about 60 seconds. Wait for the LED display to show your target temperature before you begin.

Apply heat protectant



Spray a light mist of Our Shield and Shine heat protectant evenly through your hair. Focus on the mid-lengths and ends. Let it dry for 30 seconds.

Pro Tip:

Less is more. A heavy spray weighs hair down and takes longer to style. Two to three light spritzes are enough for most hair lengths.

Start styling your hair



Separate your hair into small sections. Place the brush at the root and glide slowly from roots to ends in one smooth, steady motion. Use gentle, short strokes. Work through each section, moving from the back of your head toward the front. Repeat on the other side.

Once you achieve your desired look, press and hold the power button to turn off the device. Allow it to cool down before storing.

Pro Tip:

Slow down. The number one beginner mistake is moving the brush too fast. One slow pass gives a better result than three fast ones.

Three habits. Better hair every day.

Clean the bristles regularly.

Hair, dust, and product residue build up between the bristles over time. Use a small cleaning brush or a dry cloth to gently remove debris after every few uses. Clean bristles heat more evenly and glide more smoothly.

Store it in the travel pouch.

The pouch protects the bristles and the heating element from damage. Toss it in your bag without worrying about the brush getting knocked around. A protected brush lasts longer and performs better.

Charge it the night before.

Get into the habit of plugging in your GoBrush PRO overnight or the evening before you plan to use it. A fully charged brush means you never run out mid-style. The USB-C cable works with any standard charger, laptop, or power bank

Scan to Master Your Styling

Ready to achieve salon-quality results at home? We've created a comprehensive collection of video tutorials to help you get the most out of your styling tool.

Simply scan the QR code below with your smartphone camera to access our step-by-step styling guide, expert tips, and exclusive techniques.

Point your camera to scan

You can also visit our online library directly at: https://flownbeauty.com/pages/instructions-page

WARNING!

1. Do not use near water or where the product can become wet.
2. Do not immerse in water or any type of liquid.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
4. Children should be supervised so that they do not play with the appliance.
5. This brush is not a toy. Careful adult supervision is required when using the brush.
6. Always check the Brush and its adapter for damage before use, do not use if damaged or if the brush has been dropped.
7. The unit has no user-serviceable parts. Contact the manufacturer or an authorized repair person for any repairs. Unauthorized repairs may lead to accidents, injury, or malfunction.
8. Do not leave the Brush on a heat-sensitive surface.
9. Do not leave unattended when switched on.
10. To avoid danger of suffocation, please keep all plastic bags out of the reach of children and pets.
11. Only use the charging cable that is provided, to avoid damage to the brush.
12. Do not use this product with flammable or explosive accessories, as this may result in fire or damage.
13. When the product is charging, do not leave it unattended. Be sure to remove the charger and switch off the brush when it is fully charged.
14. Charging must only be completed via a suitable power supply, in line with the product specification.
15. Be careful to avoid direct contact of the hot surfaces with the eyes, ears, face and neck.
16. Only to be used on fully dry hair.
    To avoid electric shock, do not insert metal objects into the product.
17. Do not wrap the charging cable around the product after use, which may result in damage to the charging cable.
18. Ensure that the product is fully cooled before storing.
19. When using this product for the first time, there may be a slight burnt smell or a little smoke. It will disappear after a period of time, which is normal.
20. If the GoBrush PRO is left on, it will automatically turn off after 20 minutes of inactivity.

flown™

Need Help?

If you have any questions, safety concerns, or need troubleshooting assistance, we are here to help!

support@flownbeauty.com

Be The First To Know

Get updates, new releases, and exclusive offers.
Visit us at flownbeauty.com.

