


flown™ GOCURL PRO

QUICK START GUIDE

Product Overview

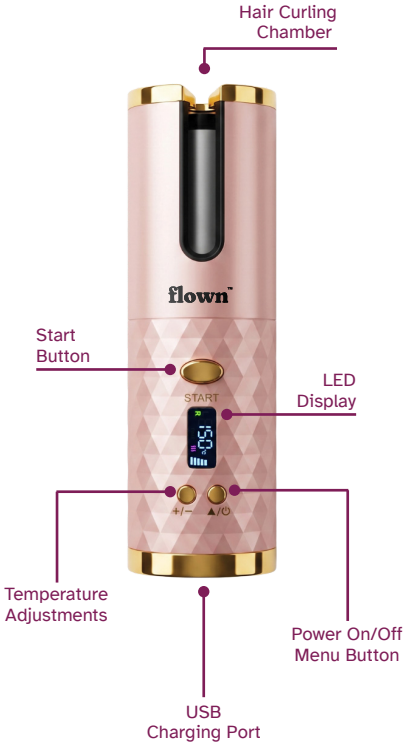

Congratulations on your

flown™ GOCURL PRO

This manual will walk you through everything, step by step. How to charge your GoCurl Pro, how it works, and how to get perfect, salon-style curls in just a few minutes at home. No experience needed, we've kept every step as simple as the tool itself.

flown™

Everything You Need Is Already Here.



GoCurl PRO

Cordless auto-curler. It's so lightweight, your arm won't get tired while you style your hair.



USB-C Cable

All you need is your regular charger block. Use any USB-C adapter, laptop port, or power bank.



Travel Pouch

Keep your GoCurl PRO protected and ready to go. Toss it in your bag and curl anywhere.

Charging your GoCurl PRO

Before your first use, charge your GoCurl Pro fully.

- Plug the USB-C cable into your GoCurl Pro and into any USB power source.
- The LED display will show a charging icon while it charges.
- Once fully charged, the icon will disappear.

A full charge takes about 5 hours and gives you approximately 60 minutes of styling time.




HOW TO USE YOUR GoCurl PRO

Turn It On



Press the power (▲) button for 3 seconds to turn the device on. (When turning device off, do the same step)

Check screen indicator

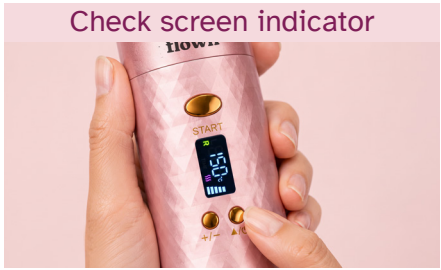

Press the power (▲) button for a few seconds until the temperature starts showing on the display screen.

Adjust the Temperature



Press the +/- adjust settings button to choose your desired heat level.

Choose a Heat Level



There are 6 Heat Settings. Choose as appropriate for your hair type.

- 150°C/300°F, 160°C/320°F Fine/Fragile Hair
- 170°C/340°F, 180°C/360°F Normal Hair
- 190°C/380°F, 200°C/390°F Thick/Coarse Hair

Curl Time Settings



Press the power button for a few seconds until the word TIMER lights up green on the display screen

Curl Time Settings +/-



Press the +/- adjust settings button to choose number of seconds.

3 Curl Time Settings



There are 3 Curl Settings. Choose time based on the type of curls you desire.

- 8 seconds for soft waves
- 12 seconds for loose curls
- 18 seconds for tight, defined curls

Curl Direction Settings +/-



Press the (+/-) button to choose direction of curl.

Curl Direction Settings



Press the power (▲) button for a few seconds until the letter L or R lights up in green on the display screen.

2 Curl Direction Settings



There are 2 Curl Direction Settings. Choose R when doing the right side of the head and L when doing the left side.

Your GoCurl Pro is ready let's curl!

Follow these steps for perfect curls in minutes



1

Take a small section of hair (about 1/2 inch) and hold it at a slight angle to the left or right of your head



2

Slide the ends into the open part of the barrel



3

Press and hold the **START** button until the device stops curling. The barrel will gently pull your hair into the chamber and curl it for you



4

Stay still and wait for **3-beep countdown**. Once you hear the last beep, release the **START** button and slowly pull the unit away. Voilà, beautiful curls!

WARNING!

1. Do not use near water or where the product can become wet.

2. Do not immerse in water or any type of liquid.

3. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

4. Children should be supervised so that they do not play with the appliance.

5. The Curler is not a toy. Careful adult supervision is required when using the curler.

6. Always check the Curler and its adapter for damage before use, do not use if damaged or if the curler has been dropped.

7. The unit has no user-serviceable parts. Contact the manufacturer or an authorized repair person for any repairs. Unauthorized repairs may lead to accidents, injury, or malfunction.

8. Do not leave the Curler on a heat-sensitive surface.

9. Do not leave unattended when switched on.

10. To avoid danger of suffocation, please keep all plastic bags out of the reach of children and pets.

11. Only use the charging cable that is provided, to avoid damage to the curler.

12. Do not use this product with flammable or explosive accessories, as this may result in fire or damage.

13. When the product is charging, do not leave it unattended. Be sure to remove the charger and switch off the curler when it is fully charged.

14. Charging must only be completed via a suitable power supply, in line with the product specification.

15. Be careful to avoid direct contact of the hot surfaces with the eyes, ears, face and neck.

16. Only to be used on fully dry hair.
To avoid electric shock, do not insert metal objects into the product.

17. Do not wrap the charging cable around the product after use, which may result in damage to the charging cable.

18. Ensure that the product is fully cooled before storing.

19. When using this product for the first time, there may be a slight burnt smell or a little smoke. This is caused by the high temperature of the oil in the rotating mechanism of the appliance. It will disappear after a period of time, which is normal.

20. If the GOCURL PRO is left on, it will automatically turn off after 5 minutes of inactivity.

flown™

Need Help?

If you have any questions, safety concerns, or need troubleshooting assistance, we are here to help!

support@flownbeauty.com

Be The First To Know

Get updates, new releases, and exclusive offers.
Visit us at flownbeauty.com.

